



**MDC 1200
Compatible**

OPERATING GUIDE

VHF TRANSCEIVERS

IC-F1000 Series

UHF TRANSCEIVERS

IC-F2000 Series



The photo shows
the UHF transceivers.

▲ Non-display type

▲ Simple type

▲ 10-key type

Icom Inc.

IMPORTANT

We appreciate you choosing Icom for your communication needs.

The MDC 1200 signaling system is built into your IC-F1000/IC-F2000 series transceiver.

READ ALL INSTRUCTIONS carefully and completely before using the transceiver.

SAVE THIS OPERATING GUIDE — This operating guide contains important operating instructions for:

- **IC-F1000, IC-F1000S, and IC-F1000T**
VHF TRANSCEIVERS
- **IC-F2000, IC-F2000S, and IC-F2000T**
UHF TRANSCEIVERS


Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries.

All other products or brands are registered trademarks or trademarks of their respective holders.

TABLE OF CONTENTS

| | |
|---|--------------|
| IMPORTANT | i |
| TABLE OF CONTENTS | ii |
| 1 PANEL DESCRIPTION..... | 1–9 |
| ■ Front, top and side panels | 1 |
| ■ Function display | 3 |
| ■ LED indicator..... | 4 |
| ■ Programmable function keys | 5 |
| 2 BASIC OPERATION..... | 10–19 |
| ■ Selecting a channel..... | 10 |
| ■ Receiving and transmitting..... | 10 |
| ■ Emergency Call..... | 12 |
| ■ Lone Worker Emergency Call..... | 13 |
| ■ Man Down Emergency Call..... | 13 |
| ■ Motion Detection Emergency Call..... | 13 |
| ■ User set mode..... | 14 |
| ■ Setting the Beep function | 16 |
| ■ Setting the Beep level | 17 |
| ■ Setting the Ringer level | 18 |
| ■ Setting the microphone gain | 19 |
| ■ Setting the squelch level | 19 |
| 3 MDC 1200 SYSTEM OPERATION..... | 20–22 |
| ■ MDC 1200 system operation..... | 20 |
| ■ Receiving a call | 20 |
| ■ Transmitting a call..... | 22 |

■ Front, top and side panels

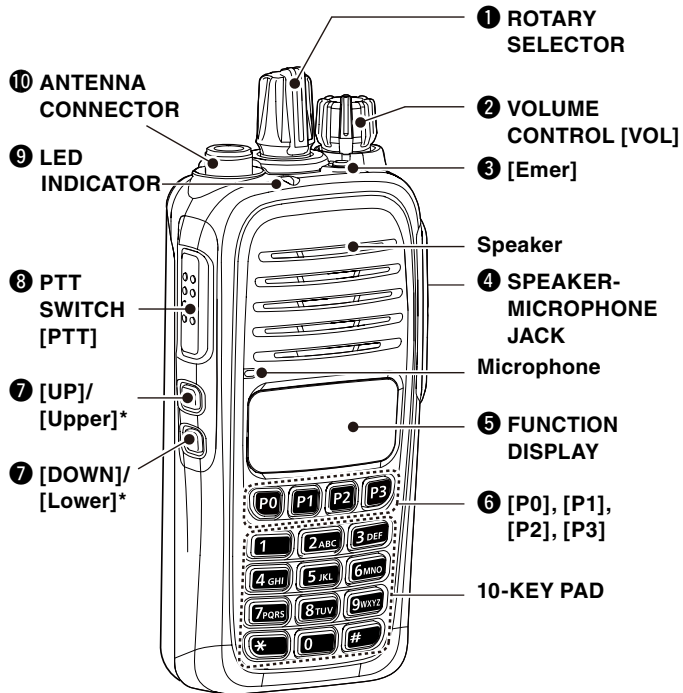

There are three types of transceivers in the IC-F1000 and IC-F2000 series.

IC-F1000/F2000: Non-display type

IC-F1000S/F2000S: Simple type [display + 4 keys (P0–P3)]

IC-F1000T/F2000T: 10-key type [display + 4 keys + 10-key pad]

The illustration is for the 10-key type.

Your transceiver may have a **FUNCTION DISPLAY**, [**P0**]–[**P3**], or **10-KEY PAD**, depending on the transceiver version.

1 ROTARY SELECTOR

➔ Rotate to select the preset memory channels.

2 VOLUME CONTROL [VOL]

➔ Rotate to turn the power ON or OFF and to adjust the audio level.

3 DEALER-ASSIGNABLE KEY [Emer]


➔ A desired function can be programmed by your dealer.

* Names for the non-display type transceiver

4 SPEAKER-MICROPHONE JACK

- Connect optional equipment.

NOTE: After turning OFF the transceiver, connect or disconnect the optional equipment.

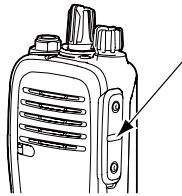

Jack cover

NOTE: Attach the jack cover when optional equipment is not used.

5 FUNCTION DISPLAY

- Displays a variety of information such as the operating channel number, channel name, User Set mode contents, and so on. See page 3 for details.

6 DEALER-ASSIGNABLE KEYS [P0]–[P3]

- Desired functions can be independently programmed by your dealer.

7 DEALER-ASSIGNABLE KEYS

[UP] or [Upper]*, [DOWN] or [Lower]*

- Desired functions can be independently programmed by your dealer.

* Names for the non-display type transceivers

8 PTT SWITCH [PTT]

- Hold down to transmit, release to receive.

9 LED INDICATOR

- Lights red while transmitting.
- Lights green while receiving a signal, or when the squelch is open.
- Lights or blinks orange when the matched 2-Tone or 5-Tone is received, depending on the presetting.
- You should charge the battery when the indicator slowly blinks.
- You must charge the battery when the indicator blinks fast.

10 ANTENNA CONNECTOR

- Connects the supplied antenna.

Count on us!