



## INSTRUCTION MANUAL


**SmarTrunk II™  
Compatible**

VHF TRANSCEIVER

# IC-F110

UHF TRANSCEIVER

# IC-F210

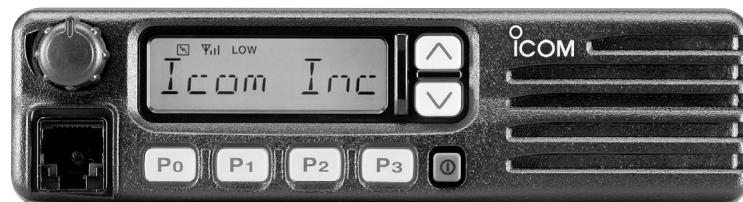

Icom Inc.

---

## IMPORTANT

---

**READ ALL INSTRUCTIONS** carefully and completely before using the transceiver.


**SAVE THIS INSTRUCTION MANUAL** — This instruction manual contains important operating instructions for the **IC-F110 VHF TRANSCEIVER** and **IC-F210 UHF TRANSCEIVER**.

---

## EXPLICIT DEFINITIONS

---

| WORD             | DEFINITION  |
|------------------|---|
| <b>⚠ WARNING</b> | Personal injury, fire hazard or electric shock may occur.                               |
| <b>CAUTION</b>   | Equipment damage may occur.   |
| <b>NOTE</b>      | If disregarded, inconvenience only. No risk of personal injury, fire or electric shock. |

Icom, Icom Inc. and the  logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries. SmarTrunk II™ is a trademark of the SmarTrunk Systems, Inc.

---

## PRECAUTION

---

**⚠ WARNING! NEVER** connect the transceiver to an AC outlet. This may pose a fire hazard or result in an electric shock.

**NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V battery. This connection will ruin the transceiver.

**NEVER** cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the transceiver might be damaged.

**NEVER** place the transceiver where normal operation of the vehicle may be hindered or where it could cause bodily injury.

**NEVER** allow children to touch the transceiver.

**NEVER** expose the transceiver to rain, snow or any liquids.

**USE** the supplied microphone only. Other microphones have different pin assignments and may damage the transceiver.

**DO NOT** use or place the transceiver in areas with temperatures below  $-30^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ), or in areas subject to direct sunlight, such as the dashboard.

**AVOID** operating the transceiver without running the vehicle's engine. The vehicle's battery will quickly run out if the transceiver transmits while the vehicle's engine OFF.

**AVOID** placing the transceiver in excessively dusty environments.

**AVOID** placing the transceiver against walls. This will obstruct heat dissipation.


**AVOID** the use of chemical agents such as benzine or alcohol when cleaning, as they damage the transceiver surfaces.

**BE CAREFUL!** The transceiver will become hot when operating continuously for long periods.

## TABLE OF CONTENTS

|  |              |
|--|--------------|
| IMPORTANT .....  | i            |
| EXPLICIT DEFINITIONS .....                             | i            |
| PRECAUTION .....                                       | i            |
| TABLE OF CONTENTS .....                                | ii           |
| <b>1 PANEL DESCRIPTION .....</b>                       | <b>1-6</b>   |
| ■ Front panel .....                                    | 1            |
| ■ Function display .....                               | 2            |
| ■ Programmable function keys .....                     | 3            |
| <b>2 OPERATION .....</b>                               | <b>7-10</b>  |
| ■ Turning power ON .....                               | 7            |
| ■ Channel selection .....                              | 7            |
| ■ Receiving and transmitting .....                     | 8            |
| ◇ Transmitting notes .....                             | 8            |
| ◇ TX code channel selection .....                      | 9            |
| ◇ TX code number selection .....                       | 9            |
| ◇ DTMF transmission .....                              | 9            |
| ◇ Scrambler function .....                             | 9            |
| ◇ User set mode .....                                  | 10           |
| <b>3 OPTIONAL SmarTrunk II™ OPERATION .....</b>        | <b>11-12</b> |
| ■ SmarTrunk II™ and conventional modes .....           | 11           |
| ■ SmarTrunk II™ operation .....                        | 11           |
| <b>4 CONNECTION AND MAINTENANCE .....</b>              | <b>13-17</b> |
| ■ Rear panel and connection .....                      | 13           |
| ■ Supplied Accessories .....                           | 14           |
| ■ Mounting the transceiver .....                       | 15           |
| ■ Optional UT-105, UT-108 or UT-111 installation ..... | 15           |
| ■ Optional UT-109 or UT-110 installation .....         | 16           |
| ■ Optional OPC-617 installation .....                  | 16           |
| ■ Antenna .....  | 17           |
| ■ Fuse replacement .....                               | 17           |
| ■ Cleaning .....                                       | 17           |
| <b>5 OPTIONS .....</b>                                 | <b>18</b>    |

## ■ Front panel

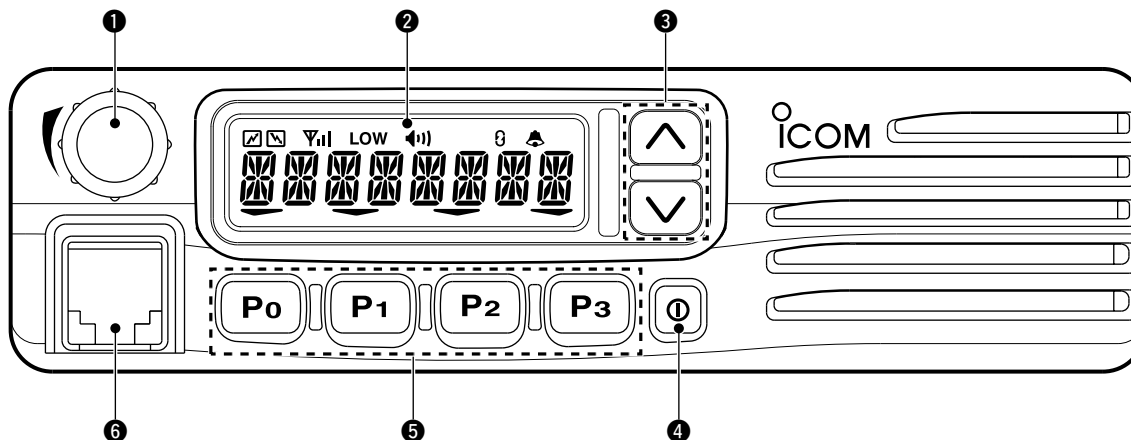

### ❶ AF VOLUME CONTROL KNOB

Rotate the knob to adjust the audio output level.

- Minimum audio level is pre-programmed.

### ❷ FUNCTION DISPLAY

Displays a variety of information, such as an operating channel number/name, 5-tone code, DTMF numbers and audible condition, etc.

**NOTE:** The above functions depend on pre-programming.

### ❸ UP/DOWN [^]/[v] KEYS

- ➡ Push to select the operating channel.
- ➡ Can be programmed for one of several functions by your dealer. (Same as [P0] to [P3] keys)

### ❹ POWER SWITCH [POWER]

Push to turn the power ON and OFF.

- The following functions are available at power ON as options:
  - Automatic scan start
  - Password prompt
  - Set mode

### 5 DEALER-PROGRAMMABLE KEYS [P0] to [P3]

Desired functions can be programmed independently by your dealer.

### 6 MICROPHONE CONNECTOR

Connect the supplied microphone or optional DTMF microphone for SmarTrunk II™ operation here.


**NEVER** connect non-specified microphones. The pin assignments may be different and the transceiver may be damaged.

### ◇ MICROPHONE

The supplied microphone has a PTT switch and a hanger hook.

- The following functions are available when the microphone is on or off hook:
  - Automatic scan start when on hook.
  - Automatic priority channel selection when off hook.
  - Sets to 'Inaudible' condition (mute condition) when on hook.
  - Sets to 'Audible' condition (unmute condition) when off hook.

## ■ Function display

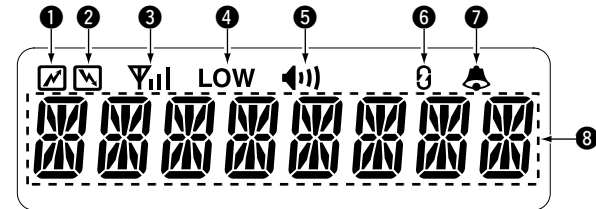

### 1 TRANSMIT INDICATOR

Appears while transmitting.

### 2 BUSY INDICATOR

Appears while the channel is busy.

### 3 SIGNAL STRENGTH METER

Indicates relative receive signal strength level.

### 4 LOW POWER INDICATOR

Appears when low output power is selected.

### 5 AUDIBLE INDICATOR

Appears when the channel is in the 'Audible' condition (unmute condition).

### 6 SCRAMBLER INDICATOR

Appears when the scrambler function is activated. (Optional UT-109 (#02)/UT-110 (#02) SCRAMBLER UNIT is required.)

# 1 PANEL DESCRIPTION

## 7 2/5TONE INDICATOR

Appears when the specified 2/5-tone call is received.

## 8 ALPHANUMERIC DISPLAY

Displays the CH number, 5-tone indication, DTMF numbers, Audible indication, etc.

**NOTE:** When the alphanumeric display blinks and transmitting becomes impossible, check that the DC battery voltage has not dropped below 8 V or that the antenna is not tuned properly or the antenna connection is faulty.

## ■ Programmable function keys

The following functions can be assigned to **[P0]**, **[P1]**, **[P2]**, **[P3]**, **[^]** and **[v]** programmable function keys.

Consult your Icom dealer for details concerning your transceiver's programming.

In the following explanations, programmable function names are bracketed. The specific switch used to activate the function depends on programming.

### ● CH UP AND DOWN KEYS

- CH UP** ➔ Select an operating channel.
- CH DN** ➔ Select a transmit code channel after pushing the **[TX CH]** key.
- ➔ Select a DTMF channel after pushing the **[DTMF]** key.
- ➔ Select a scan group after pushing and holding the **[SCAN]** key.

### ● BANK KEY

- BANK** Select and determine a bank number.
  - When the optional UT-105 is installed, push one or more times to select a channel bank for conventional channels or SmarTrunk II <sup>TM</sup> channels.

**Count on us!**

A-6233H-1EX  
Printed in Japan  
© 2002 Icom Inc.

**Icom Inc.**  
1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003 Japan