



## FULL MANUAL

VHF AIR BAND TRANSCEIVERS

**IC-A25N**  
**IC-A25C**  
**IC-A25NE**  
**IC-A25CE**

## INTRODUCTION

### 1 ACCESSORIES ATTACHMENTS

### 2 PANEL DESCRIPTION

### 3 BATTERY CHARGING

### 4 BASIC OPERATIONS

### 5 VOR NAVIGATION (For only the IC-A25N and IC-A25NE)

### 6 WAYPOINT NAVIGATION (For only the IC-A25N and IC-A25NE)

### 7 SCAN OPERATION

### 8 MEMORY OPERATION

### 9 OTHER FUNCTIONS

### 10 Bluetooth® OPERATION (For only the IC-A25N and IC-A25NE)

### 11 MENU ITEMS

### 12 SPECIFICATIONS AND OPTIONS

### 13 TROUBLESHOOTING

## INDEX



---

## INTRODUCTION

Thank you for choosing this Icom product.  
This product is designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

---

## IMPORTANT

---

This manual contains advanced features and operating instructions for the IC-A25N, IC-A25C, IC-A25NE, and IC-A25CE.

**KEEP THIS MANUAL**, because it contains important operating information that may be useful in the future.

The **BASIC MANUAL** is supplied with the transceiver.  
The **NAVIGATION GUIDE** that contains the basic instruction of the navigation function is supplied with the IC-A25N and IC-A25NE.

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand and/or other countries.  
Android and Google Play are registered trademarks or trademarks of Google Inc.  
iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.  
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Icom Inc. is under license.  
Other trademarks and trade names are those of their respective owners.  
3M, PELTOR, and WS are trademarks of 3M Company.  
All other products or brands are registered trademarks or trademarks of their respective holders.



Section 1

ACCESSORIES ATTACHMENTS

---

Supplied accessories..... 1-2

Attaching accessories ..... 1-3

◇ Antenna..... 1-3

◇ Battery pack/Battery case ..... 1-3


◇ Belt clip..... 1-4

Headset connection ..... 1-5



## Supplied accessories

Antenna

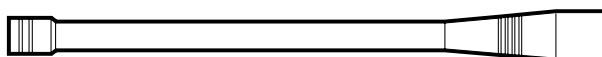


Belt clip




Handstrap




Battery case\*

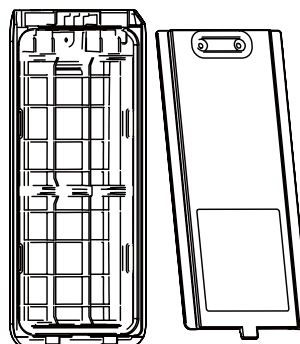


Battery pack

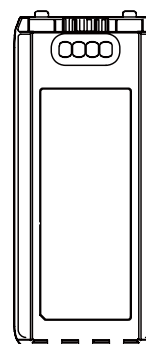


Headset adapter

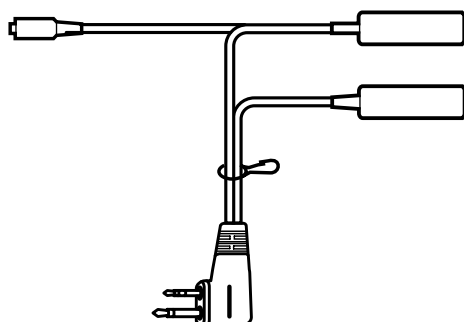

Power adapter\*

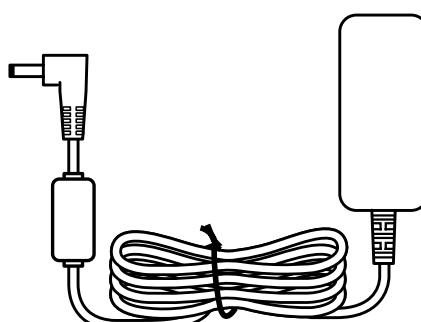

Battery charger\*

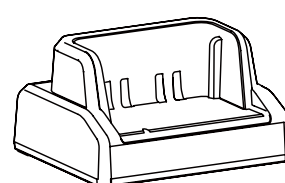

\* May not be supplied, or the shape may be different, depending on the transceiver version.




## Attaching accessories

### ◇ Antenna

Connect the supplied antenna to the antenna connector.

#### CAUTION:

- **DO NOT** carry the transceiver by holding only the antenna.
- **DO NOT** connect an antenna other than supplied antenna or those listed in this manual.
- Transmitting without an antenna may damage the transceiver.

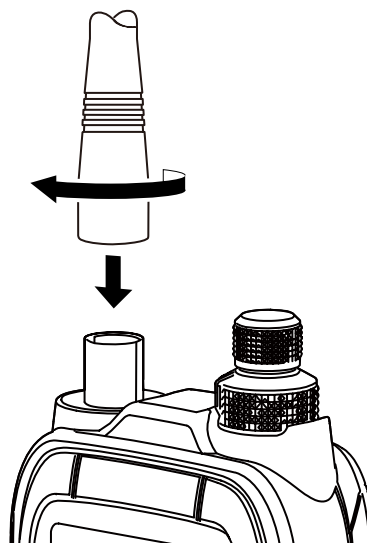


### ◇ Battery pack/Battery case

**CAUTION: DO NOT** attach or detach the battery pack or the battery case when the transceiver is wet or soiled. This may result in water or dust getting into the transceiver, battery pack, or battery case and may damage the transceiver.


#### To attach:

1. Slide the battery pack in the direction of the arrow. **(1)**
2. Push the battery pack until the battery sliding locks make a 'click' sound. **(2)**

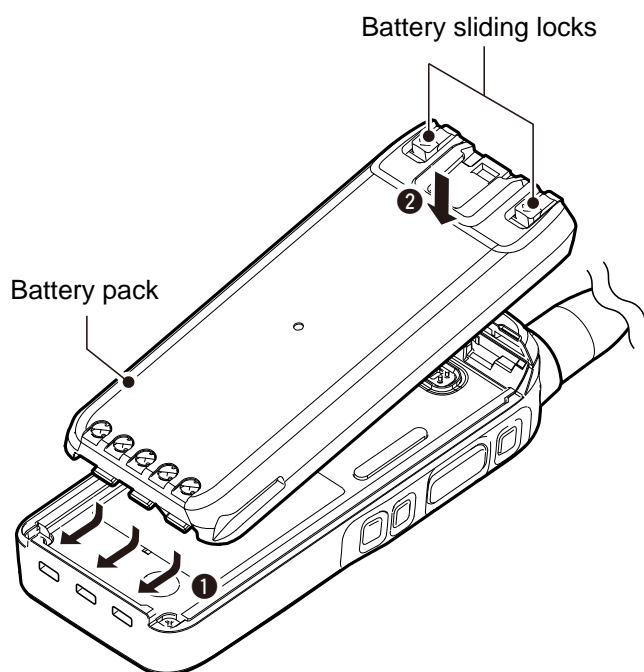

#### To detach:

1. Pull both battery sliding locks in the direction of the arrow. **(1)**
  - The battery pack is then released.
2. Lift up to detach the battery pack. **(2)**

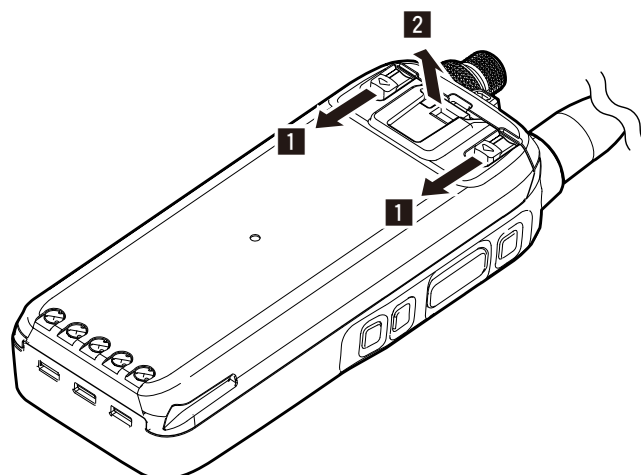

**NOTE:** Keep the battery pack terminals clean. It's a good idea to occasionally clean them.




## 1 ACCESSORIES ATTACHMENTS

### Attaching accessories (Continued)

#### ◇ Belt clip

##### To attach:


1. Remove the battery pack from the transceiver, if it is attached.
2. Slide the belt clip in the direction of the arrow until the belt clip is locked and makes a 'click' sound.

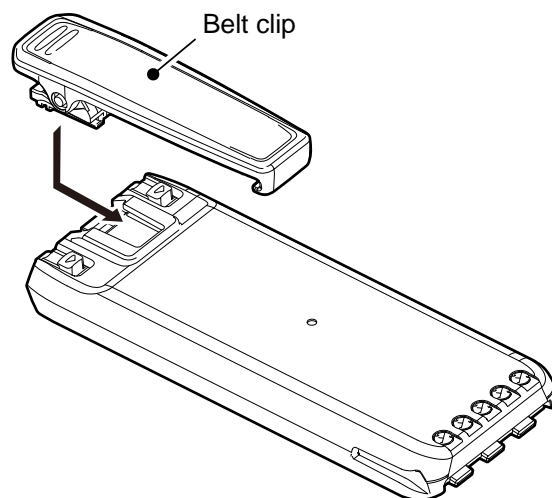

##### To detach:

Lift the tab up (❶), and slide the belt clip in the direction of the arrow (❷).


**BE CAREFUL!** Don't break your fingernail.

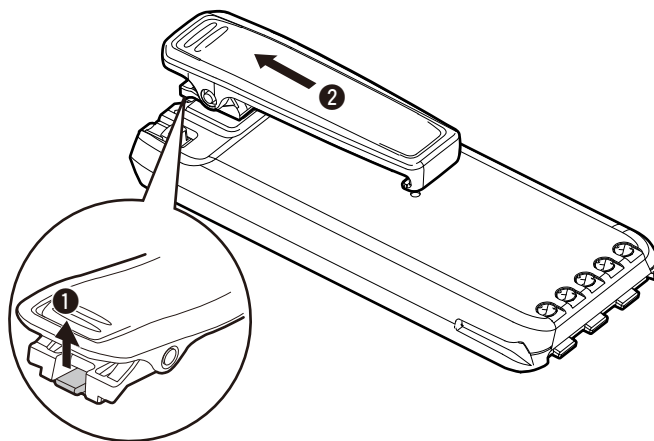



## Headset connection

Connect your headset through the supplied headset adapter. Use the Side Tone function to output your transmitted voice to the headset ([MENU] > Sounds Settings > **Side Tone**). (p. 11-7)

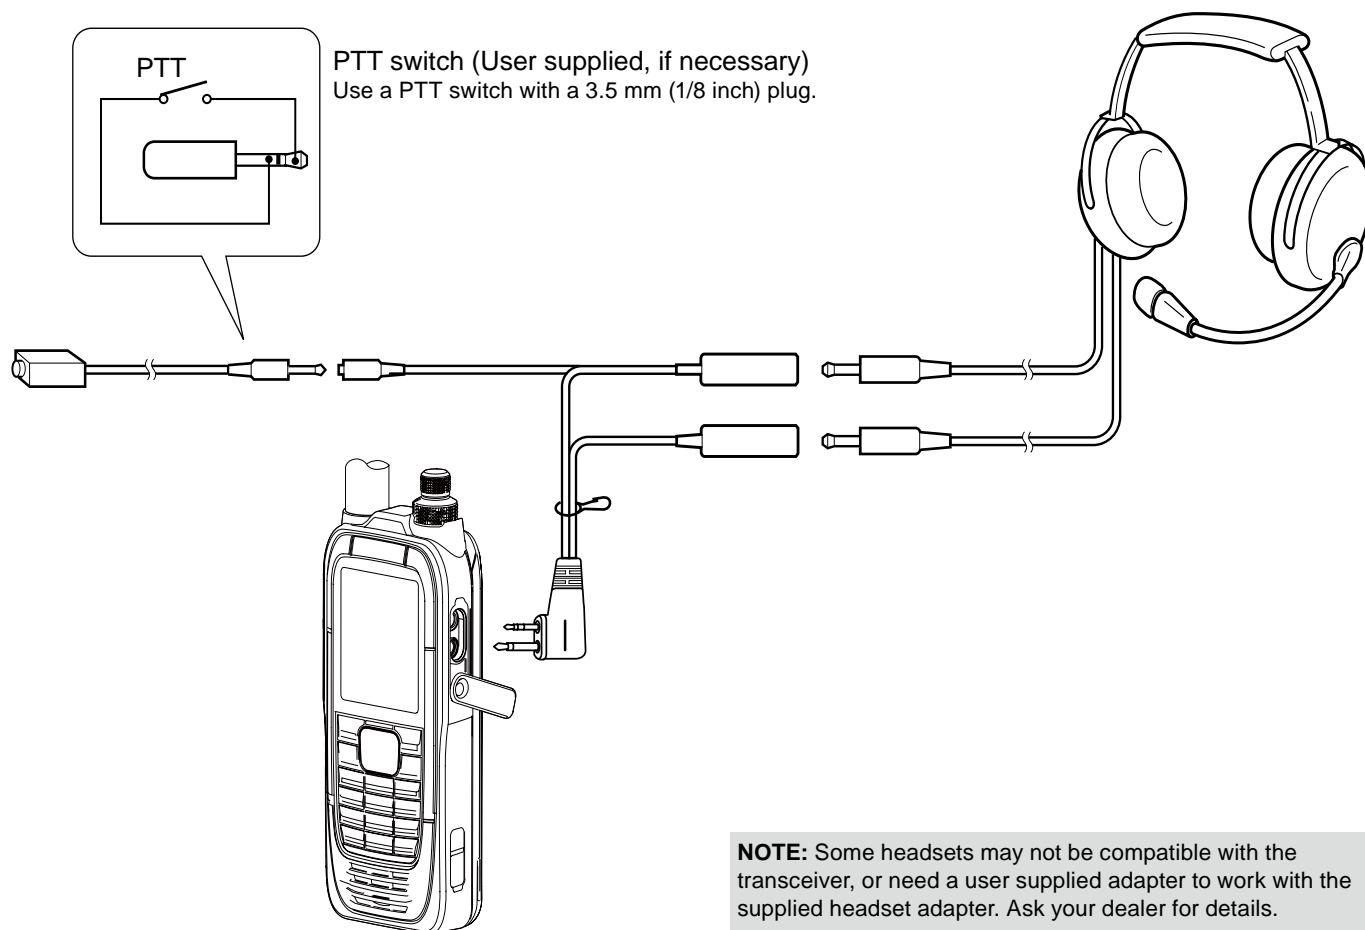



Section 2

PANEL DESCRIPTION

---

Front, top and side panels (IC-A25C/IC-A25CE)\* .....2-2


Function display .....2-3

◇ Icon area .....2-3

◇ Text area .....2-3



## Front, top and side panels (IC-A25C/IC-A25CE)\*

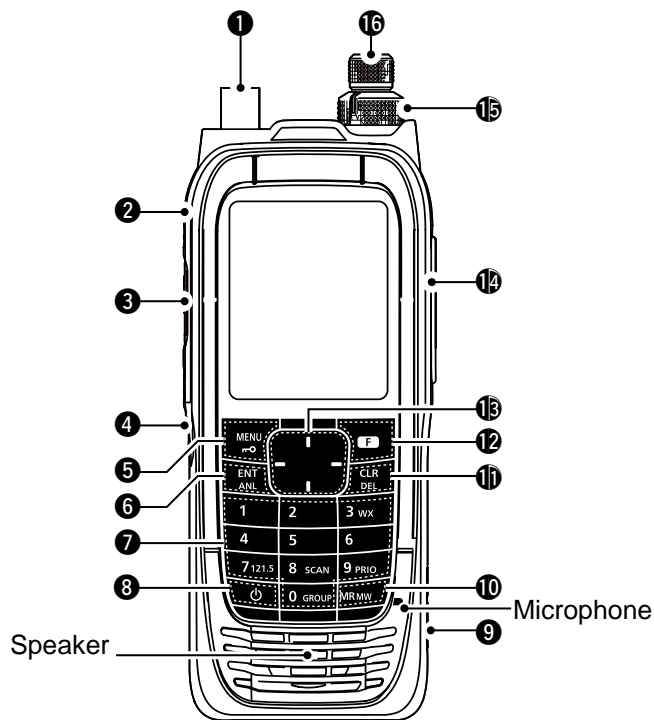

### 1 ANTENNA CONNECTOR (p. 1-3)

Connect the supplied antenna.

### 2 BACKLIGHT KEY [LIGHT]

Push to turn the backlight ON or OFF.

### 3 PTT SWITCH [PTT] (p. 4-2)

Hold down to transmit, release to receive.

### 4 SQUELCH ADJUSTMENT KEYS [SQL▲]/[SQL▼] (p. 4-2)

Push to adjust the squelch level.

### 5 MENU/LOCK KEY [MENU]/[]

- Push to enter or exit the Menu screen.
- Push [F], and then push this key to lock the keypad.

### 6 ENTER/AUTOMATIC NOISE LIMITER KEY [ENT]/[ANL]

- Push to set the entered data, selected item, and so on.
- Push [F], and then push this key to turn the Automatic Noise Limiter (ANL) function ON or OFF. (p. 4-2)

### 7 TEN KEY\*

- Push the keys to set the frequency, select a Memory channel, and so on.
- Push [F], and then push another key to use the secondary functions listed below.

#### WEATHER CHANNEL KEY [3]/[WX] (p. 9-3) (For only the IC-A25N and IC-A25C)

Push to enter the Weather Channel Selection mode.

#### EMERGENCY KEY [7]/[121.5] (p. 4-3)

Push to select the emergency frequency.

#### SCAN KEY [8]/[SCAN] (p. 7-2)

Push to start a scan.

① Push [CLR] to stop a scan.

#### PRIORITY CHANNEL KEY [9]/[PRIO] (p. 9-2)

Push to turn the Priority Watch function ON or OFF.

#### GROUP KEY [0]/[GROUP] (p. 4-2)

Push to display the "Group List" screen, to change the group in the memory mode.

### 8 POWER KEY []

Hold down for 1 second to turn the transceiver ON or OFF.

### 9 DC POWER JACK (p. 3-2)

- Connect the optional power adapter to charge the battery pack.
- Connect the optional cigarette lighter cable to use the transceiver with an external power source.

### 10 MEMORY/MEMORY WRITE KEY [MR]/[MW]

- Push to enter the Memory Channel Selection mode. (p. 4-2)
- Push [F], and then push this key to display the "Memory Write" screen, to write the set frequency to memory. (p. 8-6)

### 11 CLEAR/DELETE KEY [CLR]/[DEL]

- Push to cancel the entered data, selected item, exit the current mode, or return to the previous screen.
- While scanning, push to stop the scan. (p. 7-2)
- Push [F], and then push this key to delete the selected Memory channel or Recall channel.

### 12 FUNCTION KEY [F]

Push this key, and then push another key within 3 seconds to use its secondary function.

### 13 DIRECTIONAL KEY [UP]/[DOWN]/[LEFT]/[RIGHT]

- Push to select a Recall channel.
- Push to select a menu item, setting, and so on.

### 14 HEADSET JACK (p. 1-5)

Connects a third party headset through the supplied headset adapter.

### 15 VOLUME CONTROL KNOB [VOL]

Rotate to adjust the audio output level.

### 16 TUNING DIAL [DIAL]

Rotate to set the frequency, select a Memory channel, a menu item, and so on.

\*There are some keys and functions for only the IC-A25N and IC-A25NE. See page 5-2 for details.



Count on us!



---

---

---

---

---