

INSTRUCTION MANUAL

VHF MARINE TRANSCEIVER

IC-M402A

(REMOTE-CONTROL MIC COMPATIBLE)

IC-M402SA



Icom Inc.

FOREWORD

Thank you for purchasing this Icom product. The IC-M402A/M402SA VHF MARINE TRANSCEIVERS are designed and built with Icom's state of the art technology and craftsmanship. With proper care, this product should provide you with years of trouble-free operation.

We want to take a couple of moments of your time to thank you for making the IC-M402A/M402SA your radio of choice, and hope you agree with Icom's philosophy of "technology first." Many hours of research and development went into the design of your IC-M402A/M402SA.

♦ FEATURES

- O Large 2-digit Channel with scrolling comment
- O Easy to hear speaker
- O Built-in DSC meets RTCM SC101 requirement
- Rugged waterproof construction
- Optional COMMANDMIC® (IC-M402A only)

Icom, Icom Inc. and the OCOM logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries. COMMANDMIC is a registered trademark of Icom Incorporated (Japan) in the United states.

IMPORTANT

READ ALL INSTRUCTIONS carefully and completely before using the transceiver.

SAVE THIS INSTRUCTION MANUAL — This instruction manual contains important operating instructions for the IC-M402A/M402SA.

EXPLICIT DEFINITIONS

WORD	DEFINITION
△ WARNING!	Personal injury, fire hazard or electric shock
Zis WARNING!	may occur.
CAUTION	Equipment damage may occur.
NOTE	Recommended for optimum use. No risk of
NOTE	personal injury, fire or electric shock.

CLEAN THE TRANSCEIVER AND MICROPHONE THOR-OUGHLY WITH FRESH WATER after exposure to water including salt water, otherwise, the keys and switches may become inoperable due to salt crystallization.

IN CASE OF EMERGENCY

If your vessel requires assistance, contact other vessels and the Coast Guard by sending a distress call on Channel 16.

USING CHANNEL 16 DISTRESS CALL PROCEDURE

- 1. "MAYDAY MAYDAY MAYDAY."
- 2. "THIS IS" (name of vessel)
- 3. Your call sign or other indication of the vessel (AND 9-digit DSC ID if you have one).
- 4. "LOCATED AT" (your position)
- 5. The nature of the distress and assistance required.
- 6. Any other information which might facilitate the rescue.

Or, transmit your distress call using digital selective calling on Channel 70.

USING DIGITAL SELECTIVE CALLING (Ch 70) DISTRESS CALL PROCEDURE


- While lifting up the key cover, push and hold [DISTRESS] for 5 sec. until you hear 5 short beeps change to one long beep.
- 2. Wait for an acknowledgment from a coast station.
 - Channel 16 is automatically selected.
- 3. Push and hold [PTT], then transmit the appropriate information as listed above.

NOTE

A WARNING STICKER is supplied with the transceiver.

To comply with FCC regulations, this sticker must be affixed in such a location as to be readily seen from the operating controls of the radio as in the diagram below. Make sure the chosen location is clean and dry before applying the sticker. (p. 33)

EXAMPLE

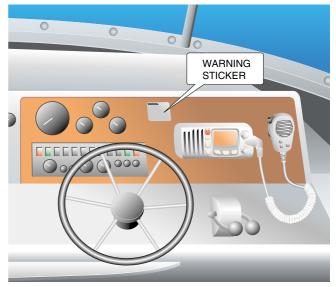

RADIO OPERATOR WARNING



Icom requires the radio operator to meet the FCC Requirements for Radio Frequency Exposure. An omnidirectional antenna with gain not greater than 9 dBi must be mounted a minimum of 5 meters (measured from the lowest point of the antenna) vertically above the main deck and

all possible personnel. This is the minimum safe separation distance estimated to meet all RF exposure compliance requirements. This 5 meter distance is based on the FCC Safe Maximum Permissible Exposure (MPE) distance of 3 meters added to the height of an adult (2 meters) and is appropriate for all vessels.

For watercraft without suitable structures, the antenna must be mounted so as to maintain a minimum of 1 meter vertically between the antenna, (measured from the lowest point of the antenna), to the heads of all persons AND all persons must stay outside of the 3 meter MPE radius.

Do not transmit with radio and antenna when persons are within the MPE radius of the antenna, unless such persons (such as driver or radio operator) are shielded from antenna field by a grounded metallic barrier. The MPE Radius is the minimum distance from the antenna axis that person should maintain in order to avoid RF exposure higher than the allowable MPE level set by FCC.

FAILURE TO OBSERVE THESE LIMITS MAY ALLOW THOSE WITHIN THE MPE RADIUS TO EXPERIENCE RF RADIATION ABSORPTION WHICH EXCEEDS THE FCC MAXIMUM PERMISSIBLE EXPOSURE (MPE) LIMIT. IT IS THE RESPONSIBILITY OF THE RADIO OPERATOR TO ENSURE THAT THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS ARE OBSERVED AT ALL TIMES DURING RADIO TRANSMISSION. THE RADIO OPERATOR IS TO ENSURE THAT NO BYSTANDERS COME WITHIN THE RADIUS OF THE MAXIMUM PERMISSIBLE EXPOSURE LIMITS.

Determining MPE Radius

THE MAXIMUM PERMISSIBLE EXPOSURE (MPE) RADIUS HAS BEEN ESTIMATED TO BE A RADIUS OF ABOUT 3M PER OET BULLETIN 65 OF THE FCC. THIS ESTIMATE IS MADE ASSUMING THE MAXIMUM POWER OF THE RADIO AND ANTENNAS WITH A MAXIMUM GAIN OF 9dBi ARE USED FOR A SHIP MOUNTED SYSTEM.

TABLE OF CONTENTS

	DREWORD	
IM	PORTANT	
ΕX	(PLICIT DEFINITIONS	
IN	CASE OF EMERGENCY	i
NO	DTE	i
	ADIO OPERATOR WARNING	
	BLE OF CONTENTS	
PF	RECAUTION	٠١
1	OPERATING RULES	1
2	PANEL DESCRIPTION	2–5
	■ Front panel	2
	■ Function display	4
	■ Microphone	5
3	BASIC OPERATION	6–10
	■ Channel selection	6
	■ Receiving and transmitting .	8
	■ Call channel programming	9
	■ Call channel programming ■ Channel comments	9 10
	■ Call channel programming ■ Channel comments	9 10 10
	 Call channel programming Channel comments Microphone lock function Display backlighting 	9 10 10
4	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH	9 10 10 10
4	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH ■ Description	9 10 10 11
4	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH ■ Description	9 10 10 11 11
4	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH ■ Description	9 10 10 11 11
•	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH ■ Description ■ Operation SCAN OPERATION	10 10 10 11 11 12–13
•	■ Call channel programming ■ Channel comments ■ Microphone lock function ■ Display backlighting DUALWATCH/TRI-WATCH ■ Description ■ Operation	10 10 11 11 12 12 12

6	DSC OPERATION	. 14–28
	■ MMSI code programming	
	■ MMSI code check	
	■ DSC individual ID	15
	■ Position indication	
	■ Distress call	17
	■ Transmitting DSC calls	18
	■ Receiving DSC calls	
7	INTERCOM OPERATION	
	(IC-M402A Only)	29
	■ Intercom operation	
8	SET MODE	. 30–32
	■ SET mode programming	
	■ SET mode items	
9	CONNECTIONS AND	
	MAINTENANCE	. 33–36
	■ Supplied accessories	33
	■ Antenna	
	■ Fuse replacement	33
	■ Cleaning	33
	■ Connections	
	■ Mounting the transceiver	35
	■ Optional MB-92 attachment	35
	■ Optional MB-69 installation	
10	TROUBLESHOOTING	37

11 COMMANDMIC® HM-127	
(IC-M402A only)	
■ Panel description	
■ Function display	
■ Channel selection	
Receiving and transmitting	43
■ Call channel programming	44
■ Lock functions	44
■ Display backlighting	45
■ Monitor function	45
■ Dualwatch/Tri-watch operation	45
■ Setting tag channels	
■ Starting a scan	
■ Set mode programming	47
■ Intercom operation	
■ Channel comments	
■ HM-127 supplied accessories	
■ Installation	
12 CHANNEL LIST	52
13 SPECIFICATIONS	53-54
■ Specifications	
■ Dimensions	
14 TEMPLATE	
15 OPTIONS	57

PRECAUTION

⚠WARNING! NEVER connect the transceiver to an AC outlet. This may pose a fire hazard or result in an electric shock.

CAUTION: Changes or modifications to this device, not expressly approved by Icom Inc., could void your authority to operate this device under FCC regulations.

NEVER connect the transceiver to a power source of more than 16 V DC or use reverse polarity. This will ruin the transceiver.

NEVER cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the transceiver may be damaged.

NEVER place the transceiver where normal operation of the vessel may be hindered or where it could cause bodily injury.

KEEP the transceiver at least 3.3 ft (1 m) away from the ship's navigation compass.

DO NOT use or place the transceiver in areas with temperatures below -4°F (-20°C) or above +140°F (+60°C) or, in areas subject to direct sunlight, such as the dashboard.

AVOID the use of chemical agents such as benzine or alcohol when cleaning, as they may damage the transceiver surfaces.

BE CAREFUL! The transceiver rear panel will become hot when operating continuously for long periods.

Place the transceiver in a secure place to avoid inadvertent use by children.

BE CAREFUL! The transceiver and optional HM-127*employ waterproof construction, which corresponds to JIS waterproof specification, Grade 7 (1 m/30 min.). However, once the transceiver or microphone has been dropped, waterproofing cannot be guaranteed due to the fact that the case may be cracked, or the waterproof seal damaged, etc. *IC-M402A only

OPERATING RULES

♦ PRIORITIES

- Read all rules and regulations pertaining to priorities and keep an up-to-date copy handy. Safety and distress calls take priority over all others.
- You must monitor Channel 16 when you are not operating on another channel.
- False or fraudulent distress signals are prohibited and punishable by law.

♦ PRIVACY

- Information overheard but not intended for you cannot lawfully be used in any way.
- Indecent or profane language is prohibited.

♦ RADIO LICENSES

(1) SHIP STATION LICENSE

You must have a current radio station license before using the transceiver. It is unlawful to operate a ship station which is not licensed.

Inquire through your dealer or the appropriate government agency for a Ship-Radiotelephone license application. This government-issued license states the call sign which is your craft's identification for radio purposes.

(2) OPERATOR'S LICENSE

A Restricted Radiotelephone Operator Permit is the license most often held by small vessel radio operators when a radio is not required for safety purposes.

The Restricted Radiotelephone Operator Permit must be posted or kept with the operator. Only a licensed radio operator may operate a transceiver.

However, non-licensed individuals may talk over a transceiver if a licensed operator starts, supervises, ends the call and makes the necessary log entries.


Keep a copy of the current government rules and regulations handy.

Radio license for boaters (U.S.A. only)

The Telecommunications Act of 1996 permits recreational boaters to have and use a VHF marine radio, EPIRB, and marine radar without having an FCC ship station license. Boaters traveling on international voyages, having an HF single sideband radiotelephone or marine satellite terminal, or required to carry a marine radio under any other regulation must still carry an FCC ship station license. For further information, see the FCC Ship Radio Stations Fact Sheet.

PANEL DESCRIPTION

■ Front panel

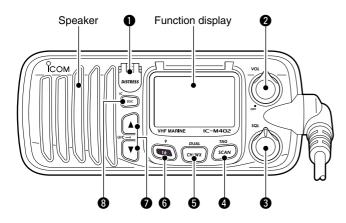

- ◆ DISTRESS KEY [DISTRESS]
 Transmits Distress call when pushed for 5 sec. (p. 17)
- **2 POWER/VOLUME CONTROL [VOL]**Turns power ON and OFF and adjusts the audio level. (p. 8)
- 3 SQUELCH CONTROL [SQL]
 Sets the squelch threshold level. (p. 8)

4 SCAN KEY [SCAN•TAG] (p. 13)

- Starts and stops Normal or Priority scan.
- Sets or clears the displayed channel as a tag (scanned) channel when pushed for 1 sec.
- ➡ While pushing [HI/LO] on the microphone, push for 3 sec. to clear or set all tag channels in the selected channel group.

6 CHANNEL/WEATHER CHANNEL KEY [CH/WX•DUAL]

- → Toggles between regular channels and weather channel when pushed momentarily. (p. 7)
- Starts Dualwatch or Tri-watch when pushed for 1 sec. (p. 11)
- ⇒ Stops Dualwatch or Tri-watch when either is activated.

6 CHANNEL 16/CALL CHANNEL KEY [16•9]


- ⇒ Selects Channel 16 when pushed. (p. 6)
- Selects call channel when pushed for 1 sec. (p. 6)
 - "CALL" appears when call channel is selected.
- → Push for 3 sec. to enter call channel programming condition when call channel is selected. (p. 9)
- ➡ While pushing [CH/WX•DUAL], push to enter the channel comments programming condition. (p. 10)
- ➡ Enters Set mode when pushed while turning power ON. (p. 30)

⑦ CHANNEL UP/DOWN KEYS [▲]/[▼]•[U/I/C]

- Selects the operating channels, Set mode settings, etc. (pgs. 6, 7, 30)
- While pushing [SCAN-TAG], push [▲] or [▼] to adjust the brightness of the LCD and key backlight. (p. 10)
- ⇒ Selects one of three channel groups in sequence when both keys are pushed. (p. 7)
 - International, U.S.A. and Canadian channels are available.

3 DSC/INTERCOM KEY [DSC•IC]

- ⇒ Selects the DSC menu when pushed. (p. 14)
- → Activates an optional intercom function when pushed for 1 sec. (p. 29, IC-M402A only)
- → While pushing [SCAN•TAG], push to show the current position from a GPS receiver. (p. 16)

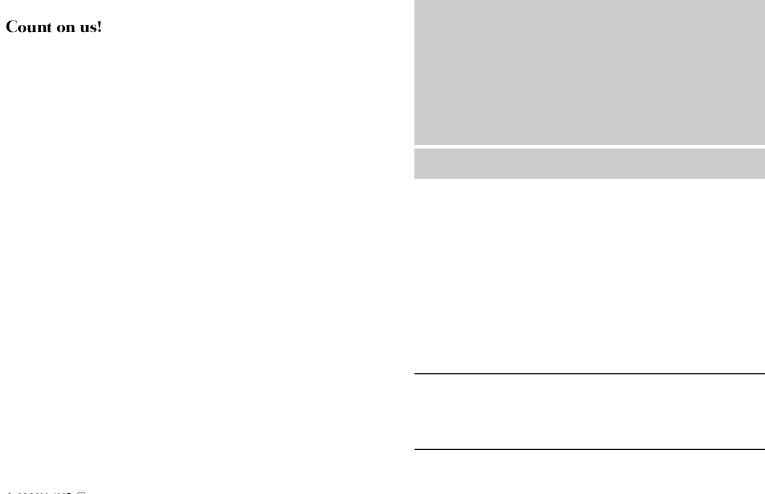

A-6322H-1US-① Printed in Japan © 2003–2005 Icom Inc.

Icom Inc. 1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan