



## INSTRUCTION MANUAL

MARINE RADAR

**MR-1200RII**  
(Radome type)

**MR-1200TII**  
(Open array type; 4 kW)

**MR-1200TIII**  
(Open array type; 6 kW)



## SYSTEM COMPONENTS

MODEL NAME	LCD DISPLAY	SCANNER UNIT
MR-1200RII	SX-3230 (12.1-inch LCD)	EX-2714 (Radome type)
MR-1200TII		EX-2780 (Open array type; 4 kW)
MR-1200TIII		EX-2780 (Open array type; 6 kW)

## SUPPLIED ACCESSORIES

### • EX-2714 (Radome type unit)

	Qty.
① System cable (15 m) .....	1
② Installation bolts (M10×50) .....	4
③ Installation bolts (M10×25) .....	4
④ Installation nuts (M10) .....	4
⑤ Flat washers (M10) .....	4
⑥ Spring washers (M10) .....	4

### • EX-2780 (Open array type unit)

	Qty.
① System cable (20 m) .....	1
② Installation bolts (M10×40) .....	4
③ Installation nuts (M10) .....	4
④ Flat washers (M10) .....	4
⑤ Spring washers (M10) .....	4
⑥ Allen wrench .....	1
⑦ Cap bolts (M8×18 mm) .....	4
⑧ Belleville washers (8L) .....	4
⑨ Sealing washers (T) .....	4
⑩ Flat washers (M8) .....	4
⑪ Flat washers (AW) .....	4
⑫ Ferrite EMI filter .....	1

### • SX-3230 (12.1-inch LCD display unit)

	Qty.
① Front cover .....	1
② NMEA connector (PLT-167-P-R) .....	1
③ NMEA connector (PLT-168-P-R) .....	1
④ Spare fuse (FGB 15 A) .....	1
⑤ Spare fuse (FGB 5 A: for over 24 V power supply) .....	1
⑥ DC power cable .....	1
⑦ Mounting bracket .....	1
⑧ Mounting knob bolts .....	2
⑨ Installation bolts (M6×30) .....	5
⑩ Installation nuts (M6) .....	5
⑪ Spring washers (M6) .....	10
⑫ Flat washers (M6) .....	10
⑬ Instruction manual .....	1
⑭ Operating guide .....	1

The MR-1200RII/TII/TIII are supplemental aids to navigation and are not intended to be a substitute for accurate and current nautical charts.

## FOREWORD

Thank you for purchasing Icom's **MR-1200RII/TII/TIII** MARINE RADAR.

The radar is designed especially for fishing boats. It has powerful transmitting power, a 12.1-inch LCD display and many other advanced features.



If you have any questions regarding the operation of the radar, contact your nearest authorized Icom Inc. dealer.

## IMPORTANT

**READ THIS INSTRUCTION MANUAL CAREFULLY** before attempting to operate the radar.

**SAVE THIS INSTRUCTION MANUAL.** This manual contains important safety and operating instructions for the MR-1200RII/TII/TIII.

## EXPLICIT DEFINITIONS

WORD	DEFINITION
 <b>DANGER!</b>	Personal death, serious injury or an explosion may occur.
 <b>WARNING!</b>	Personal injury, fire hazard or electric shock may occur.
<b>CAUTION</b>	Equipment damage may occur.
<b>NOTE</b>	If disregarded, inconvenience only. No risk of personal injury, fire or electric shock.

## BE CAREFUL!

**SART** signals may not be detected and may not be displayed on the screen depending on the **SEA**, **RAIN** or **IR** settings.

Follow the settings as below to detect the SART signals on the screen.

- ① Select the screen range between 6 NM to 12 NM with **[+/-]**. (p. 1)
- ② Set the **[GAIN]** as high as possible. (p. 2)
- ③ Set the **[SEA]** to minimum. (p. 2)
- ④ Set the **[RAIN]** to minimum. (p. 2)
- ⑤ Turn OFF the **[IR]** function. (p. 11)
- ⑥ Turn OFF the **[STRETCH]** function. (p. 11)

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries.

---

## PRECAUTIONS

---

### *For Display unit:*

⚠ **WARNING! NEVER** let metal, wire or other objects touch any internal part of the display unit. This may result in an electric shock.

⚠ **WARNING! NEVER** apply AC voltage to the DC connector of the display unit. This may pose a fire hazard, result in an electric shock or damage the display unit.

⚠ **WARNING! NEVER** apply more than 42 V DC to the DC connector of the display unit. This may pose a fire hazard or damage the display unit.

⚠ **WARNING! NEVER** touch the display unit with wet hands. This may result in an electric shock or damage the display unit.

⚠ **WARNING! NEVER** open the display unit. There are no user adjustment points. This may result in an electric shock and incorrect reassembly may cause a fire hazard.

**CAUTION: NEVER** connect the display unit to a DC power source using reverse polarity. This will damage the display unit.

**CAUTION: NEVER** remove the fuse holder from the DC power cable. This will damage the display unit.

**DO NOT** place the display unit in excessively dusty environments.

**DO NOT** place the display unit near heating equipment or in direct sunlight or where hot or cold air blows directly onto it.

**DO NOT** use or place the display unit in areas with temperature below  $-15^{\circ}\text{C}$  ( $+5^{\circ}\text{F}$ ) or above  $+55^{\circ}\text{C}$  ( $+131^{\circ}\text{F}$ ).

**DO NOT** use harsh solvents such as benzine or alcohol when cleaning the display unit, as they will damage the display unit's surfaces.

**DO NOT** place the display unit in areas that will block air passage or put anything around the display unit. This will obstruct heat dissipation.

**KEEP** the display unit out of the reach of children.

**KEEP** the display unit away from heavy rain, and never immerse it in the water.

The display unit meets IPX4 requirements for splash resistance when the supplied connection cable, scanner unit are connected.

However, if it is dropped, splash resistance cannot be guaranteed because of possible damage to the case or the waterproof seals.

The LCD display may have cosmetic imperfections that appear as small dark or light spots. This is not a malfunction or defect, but a normal characteristic of LCD display.

### *For Scanner unit:*

⚠ **DANGER: HIGH VOLTAGE! NEVER** open the scanner unit. The scanner unit contains high voltage that could be fatal. And there are no user adjustment points. All repairs and adjustments **MUST** be made by a qualified electronics technician at your Marine Navigation Dealer.

### *For qualified electronics technician only:*

⚠ **DANGER: HIGH VOLTAGE!** High voltages of up to 3,500 volts are used in the scanner unit. Although prudent measures for safety have been adopted, sufficient care must be taken in the operation, maintenance and adjustment of the scanner unit.

Electric shock of 1,000 volts or more may cause electrocution and death; even an electric shock of only 100 volts may be fatal.

⚠ **DANGER: HIGH VOLTAGE!** To prevent an electric shock, turn the radar's power is OFF and do not reach inside the scanner unit until you have:

- discharged the capacitors by disconnecting the system cable from the radar unit for 5 minutes.
- checked that no electric charges remain inside the device.

Also, it is safest to wear dry insulated rubber gloves. **NEVER** use both hands simultaneously; keep one hand in your pocket.

### **⚠ WARNING: RADIATION HAZARD!**

Radiation emitted from the scanner unit can be harmful, particularly to the eyes. To avoid harmful radiation, turn the radar's power is OFF before beginning work on the scanner unit.

**DO NOT** use or place the scanner unit in areas with temperature below  $-25^{\circ}\text{C}$  ( $-13^{\circ}\text{F}$ ) or above  $+70^{\circ}\text{C}$  ( $+158^{\circ}\text{F}$ ).

**NEVER** immerse the scanner unit in the water.

The scanner units meet IPX6\* requirements for high-pressure water jet resistance.



However, if these items are dropped, high-pressure water jet resistance cannot be guaranteed because of possible damage to the cases or the waterproof seals.

\* Except for the cable connectors. They meet IPX4 requirements while connecting to the radar unit.

# TABLE OF CONTENTS

SYSTEM COMPONENTS .....	i	■ AIS (Automatic Identification System) .....	21
SUPPLIED ACCESSORIES .....	i	■ AIS settings .....	22
FOREWORD .....	ii	■ AIS operation .....	23
IMPORTANT .....	ii	■ Status of the Vessel icon.....	24
EXPLICIT DEFINITIONS .....	ii	■ Plots (AIS) .....	24
PRECAUTIONS .....	iii		
TABLE OF CONTENTS .....	iv	<b>7 BASIC RADAR THEORY .....</b>	<b>25–27</b>
<b>1 PANEL DESCRIPTION .....</b>	<b>1–4</b>	■ Side-lobe echoes .....	25
■ Front panel .....	1	■ Indirect echoes .....	25
■ Screen .....	3	■ Multiple echoes .....	26
<b>2 MENU .....</b>	<b>5–7</b>	■ Minimum range .....	26
■ VIDEO MENU .....	5	■ Blind and Shadow sectors .....	27
■ FUNCTION MENU.....	5	■ Target resolution .....	27
■ ATA AIS MENU .....	6		
■ TARGET MEMU.....	7	<b>8 INSTALLATION AND CONNECTIONS .....</b>	<b>28–34</b>
■ INT. SETTING MENU .....	7	■ Connecting the units .....	28
<b>3 BASIC OPERATION .....</b>	<b>8–13</b>	■ Power source requirement .....	28
■ Checking the installation .....	8	■ Ground connection .....	28
■ Turning power ON/OFF .....	8	■ Installing the display unit .....	29
■ Basic operation .....	9	■ Mounting the EX-2714 scanner unit .....	30
■ RAIN function.....	10	■ Wiring the EX-2714 system cable .....	31
■ SEA function.....	10	■ Mounting the EX-2780 scanner unit .....	32
■ OFF CENTER function .....	10	■ Wiring the EX-2780 system cable .....	33
■ IR function .....	11	■ Attaching the EX-2780 scanner unit .....	34
■ STRETCH function .....	11		
■ ZOOM function .....	11	<b>9 OTHER FUNCTIONS .....</b>	<b>35</b>
■ TRAILS function .....	12		
■ Power save function .....	12	<b>10 SERVICE MAN MENU .....</b>	<b>36–38</b>
■ Ship speed indication .....	13	■ Service man menu .....	36
■ Position indication .....	13	■ Select the language .....	36
■ Waypoint indication .....	13	■ TIMING adjustment .....	37
■ Long pulse function.....	13	■ HDG adjustment.....	37
■ Bearing setting .....	13	■ SPD adjustment.....	38
<b>4 DISTANCE AND DIRECTION</b>		■ RANGE selection.....	38
<b>MEASUREMENTS .....</b>	<b>14–16</b>	<b>11 ERROR MESSAGE .....</b>	<b>39</b>
■ Distance measurement .....	14	■ Error message list .....	39
■ Bearing and Distance measurement .....	15	■ AIS error message list .....	39
■ Advanced measurements .....	16	<b>12 MAINTENANCE .....</b>	<b>40</b>
<b>5 ALARM FUNCTION .....</b>	<b>17</b>	■ Periodic maintenance .....	40
■ Alarm zone setting .....	17	■ Scanner unit maintenance .....	40
■ Zone alarm setting .....	17	■ Display unit maintenance .....	40
<b>6 ATA/AIS .....</b>	<b>18–24</b>	■ Options .....	40
■ ATA (Automatic Tracking Aid) .....	18	<b>13 SPECIFICATIONS .....</b>	<b>41–42</b>
■ ATA settings .....	18		
■ ATA operation .....	19	<b>14 EXTERNAL DATA LIST .....</b>	<b>43</b>
■ Plotting marks .....	20		
■ Course and speed vector .....	20	<b>(Supplement) TEMPLATE</b>	
■ Plots (ATA) .....	20	■ Template for the display unit	
		• SX-3230 (Display mount bracket template)	
		■ Template for the scanner unit	
		• EX-2714	
		• EX-2780	

## Front panel

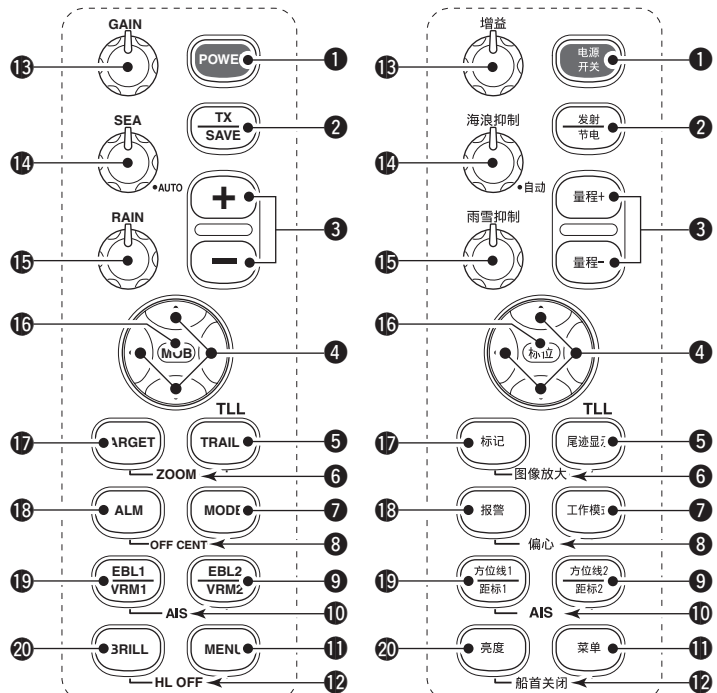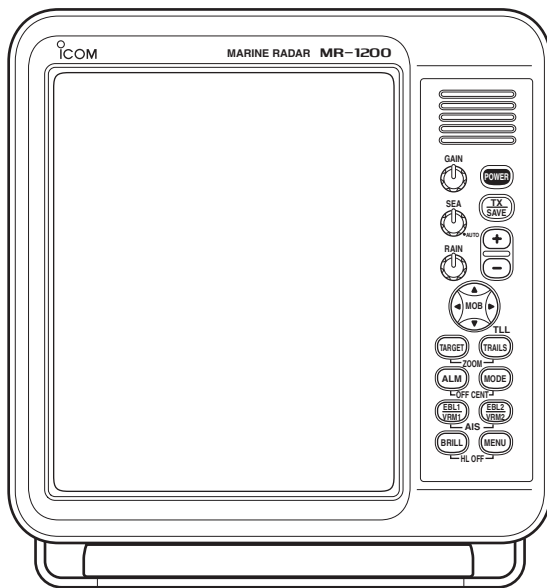

Control panel (English)

Control panel (Chinese)

### 1 POWER SWITCH [POWER]/[电源开关] (p. 9)

Push to turn the radar power ON or OFF.

- The standby screen appears for 90 seconds while the magnetron warms up.
- The initial screen appears and a beep sounds after the power has been turned ON.

### 2 TRANSMIT/SAVE SWITCH [TX (SAVE)]/[发射(节电)]

➔ Push to toggle between the TX mode and the standby mode. (p. 9)

➔ Hold down for 1 second to turn ON the power save function. The radar for TX interval scan is fixed at 10 revolutions. (p. 12)

- Select the save time in the INT. SETTING menu.

### 3 RANGE UP/ DOWN SWITCHES [+]/[-]/[量程+]/[量程-] (p. 9)

Push [+] to increase the screen range.

Push [-] to decrease the screen range.

### 4 UP, DOWN, LEFT, RIGHT KEYS [▲] [▼] [◀] [▶]

Set the EBLs, VRMs, alarm area, ATA target, AIS target and so on.

In the Menu screen, push [▲] or [▼] to select the menu items, and then push [◀] or [▶] to select the option or set the value.

In the normal operating mode, push a combination of the [▲]/[◀] or [▲]/[▶], or [▼]/[◀] or [▼]/[▶] to move the cross line cursor to the upper left or right, or lower left or right.

### 5 TRAILS SWITCH [TRAILS]/[尾迹显示] (p. 12)

➔ Push to toggle the trail function ON or OFF. This is useful for watching other ship's tracks, and approximate relative speed.

- Trail Time can be set in the VIDEO menu.

➔ Hold down for 1 second to output the position information where the cursor is placed, to the NMEA output terminals.

- TLL output requires bearing data and position data.

### 6 ZOOM FUNCTION [ZOOM]/[图像放大] (p. 11)

Simultaneously push [TARGET]/[标记] and [TRAILS]/[尾迹显示] to toggle the ZOOM function ON or OFF.

The ZOOM function enlarges the target to two times normal size.

- Move the cursor to the target, then turn ON the function.
- The screen zooms the middle of the screen around your own ship.
- This function is not usable in the 1/8 and the 32 NM or higher ranges.

### 7 MODE SWITCH [MODE]/[工作模式]

Push to select the Head-up (H UP), Course-up (C UP), North-up (N UP) or True motion (TM) screens.

- The North-up and Course-up screens can be selected only when a bearing data input is connected. (pp. 28, 43)
- The TM screen requires bearing data and LOG or position data. (pp. 28, 43)
- The TM screen is not selectable in the 32 NM or higher range.

**Icom Inc.**  
1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan