



## INSTRUCTION MANUAL

HF/VHF  
ALL MODE TRANSCEIVER

# IC-7400



---

## FOREWORD

---

We understand that you have a choice of many different radios in the market place. We want to take a couple of moments of your time to thank you for making the IC-7400 your radio of choice, and hope you agree with Icom's philosophy of "technology first". Many hours of research and development went into the design of your IC-7400.

### FEATURES

- 32-bit Floating point DSP and 24-bit AD/DA converter
- DSP IF Filter creates 102 types of filter
- All mode capability covering 160–2 m
- 100 Watt continuous duty cycle
- All mode digital modulation and demodulation
- RTTY demodulator and decoder
- Twin Pass Band Tuning
- RF speech compression with selectable pass band
- Microphone Equalizer
- SSB/CW synchronous tuning

---

## IMPORTANT

---


**READ THIS INSTRUCTION MANUAL CAREFULLY** before attempting to operate the transceiver.

**SAVE THIS INSTRUCTION MANUAL.** This manual contains important safety and operating instructions for the IC-7400.

---

## EXPLICIT DEFINITIONS


---


WORD	DEFINITION
 <b>WARNING</b>	Personal injury, fire hazard or electric shock may occur.
<b>CAUTION</b>	Equipment damage may occur.
<b>NOTE</b>	If disregarded, inconvenience only. No risk or personal injury, fire or electric shock.


---


## PRECAUTIONS

---

 **WARNING HIGH VOLTAGE! NEVER** attach an antenna or internal antenna connector during transmission. This may result in an electrical shock or burn.

 **NEVER** apply AC to the [DC13.8V] jack on the transceiver rear panel. This could cause a fire or ruin the transceiver.

 **NEVER** apply more than 16 V DC, such as a 24 V battery, to the [DC13.8V] jack on the transceiver rear panel. This could cause a fire or ruin the transceiver.

 **NEVER** let metal, wire or other objects touch any internal part or connectors on the rear panel of the transceiver. This may result in an electric shock.

**NEVER** expose the transceiver to rain, snow or any liquids.

**AVOID** using or placing the transceiver in areas with temperatures below  $-10^{\circ}\text{C}$  ( $+14^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ). Be aware that temperatures on a vehicle's dashboard can exceed  $+80^{\circ}\text{C}$  ( $+176^{\circ}\text{F}$ ), resulting in permanent damage to the transceiver if left there for extended periods.

**AVOID** placing the transceiver in excessively dusty environments or in direct sunlight.

**AVOID** placing the transceiver against walls or putting anything on top of the transceiver. This will obstruct heat dissipation.

Place unit in a secure place to avoid inadvertent use by children.

During mobile operation, **DO NOT** operate the transceiver without running the vehicle's engine. When the transceiver's power is ON and your vehicle's engine is OFF, the vehicle's battery will soon become exhausted.

Make sure the transceiver power is OFF before starting the vehicle. This will avoid possible damage to the transceiver by ignition voltage spikes.

During maritime mobile operation, keep the transceiver and microphone as far away as possible from the magnetic navigation compass to prevent erroneous indications.

**BE CAREFUL!** The heatsink will become hot when operating the transceiver continuously for long periods.

**BE CAREFUL!** If a linear amplifier is connected, set the transceiver's RF output power to less than the linear amplifier's maximum input level, otherwise, the linear amplifier will be damaged.

Use Icom microphones only (supplied or optional). Other manufacturer's microphones have different pin assignments, and connection to the IC-7400 may damage the transceiver.

# TABLE OF CONTENTS

<b>FOREWORD</b> .....	i
<b>IMPORTANT</b> .....	i
<b>EXPLICIT DEFINITIONS</b> .....	i
<b>PRECAUTIONS</b> .....	i
<b>TABLE OF CONTENTS</b> .....	ii

## QUICK REFERENCE GUIDE .....I-X

■ Installation .....	I
■ Operation .....	III
■ Your first contact .....	IV
■ Ready to call CQ? .....	IX

## 1 PANEL DESCRIPTION..... 1-12

■ Front panel .....	1
■ Rear panel .....	7
■ LCD display .....	9
■ Multi function switches .....	11
■ Microphone (HM-36) .....	12

## 2 INSTALLATION AND CONNECTIONS..... 13-17

■ Unpacking .....	13
■ Selecting a location .....	13
■ Grounding .....	13
■ Antenna connection .....	13
■ Required connections .....	14
■ Advanced connections .....	15
■ Power supply connections .....	16
■ Linear amplifier connections .....	17
■ External antenna tuner connections .....	17

## 3 BASIC OPERATION..... 18-25

■ When first applying power (CPU resetting) .....	18
■ Initial settings .....	18
■ Selecting an operating band .....	19
■ Selecting VFO/memory mode .....	20
■ VFO operation .....	20
■ Frequency setting .....	21
■ Operating mode selection .....	23
■ Volume setting .....	23
■ Squelch and receive (RF) sensitivity .....	24
■ Basic transmit operation .....	25

## 4 RECEIVE AND TRANSMIT . 26-45

■ Operating SSB .....	26
■ Operating CW .....	27

■ Electronic keyer functions .....	29
■ Operating RTTY (FSK) .....	35
■ RTTY functions .....	36
■ Operating AM .....	40
■ Operating FM .....	41
■ Repeater operation .....	44

## 5 FUNCTIONS FOR RECEIVE

.....	46-53
■ Simple band scope .....	46
■ Preamp/Attenuator .....	47
■ RIT function .....	47
■ AGC function .....	48
■ IF filter selection .....	49
■ IF (DSP) filter shape .....	50
■ Noise blanker .....	50
■ Meter peak hold function .....	50
■ Twin PBT operation .....	51
■ Noise reduction .....	52
■ Notch function .....	52
■ Dial lock function .....	52
■ Voice squelch control function .....	53

## 6 FUNCTIONS FOR TRANSMIT

.....	54-60
■ VOX function .....	54
■ Break-in function .....	55
■ $\Delta$ TX function .....	56
■ Monitor function .....	56
■ Speech compressor .....	57
■ Transmit filter width selection .....	57
■ Split frequency operation .....	58
■ Quick split function .....	59
■ Measuring SWR .....	60

## 7 MEMORY OPERATION..... 61-67

■ Memory channels .....	61
■ Memory channel selection .....	61
■ Programming a memory .....	62
■ Memory clearing .....	62
■ Selecting the call channel .....	63
■ Programming the call channel .....	63
■ Frequency transferring .....	64
■ Programming scan edges .....	65
■ Assigning memory names .....	66
■ Memo pads .....	67

## 8 SCANS..... 68-73

■ Scan types .....	68
■ Preparation .....	68

■ Voice squelch control function .....	69
■ Scan set mode .....	69
■ Programmed scan/Fine programmed scan .....	70
■ Memory scan operation .....	71
■ Select memory scan .....	71
■ $\Delta$ F scan operation and Fine $\Delta$ F scan .....	72
■ Tone scan/DTCS code scan operation .....	73

## 9 ANTENNA TUNER OPERATION

.....	74-76
■ Antenna connection and selection .....	74
■ Antenna tuner operation .....	75
■ Optional external tuner operation .....	76

## 10 DATA COMMUNICATION ... 77-79

■ Connections .....	77
■ Packet (AFSK) operation .....	78
■ Adjusting the TNC output level .....	79
■ Data transmission speed .....	79

## 11 SET MODE..... 80-88

■ General set mode .....	80
■ Tone control set mode .....	88

## 12 OPTION INSTALLATION .... 89-90

■ Opening the transceiver's case .....	89
■ UT-102 VOICE SYNTHESIZER UNIT .....	89
■ CR-338 HIGH STABILITY CRYSTAL UNIT .....	90

## 13 MAINTENANCE..... 91-93

■ Trouble shooting .....	91
■ Fuse replacement .....	92
■ Tuning dial brake adjustment .....	92
■ Resetting the CPU .....	93
■ Frequency calibration (approximate) .....	93

## 14 CONTROL COMMAND ..... 94-98

■ Remote jack (CI-V) information .....	94
----------------------------------------	----

## 15 SPECIFICATIONS ..... 99

## 16 OPTIONS ..... 100


## 17 ABOUT CE..... 101-102

## SUPPLIED ACCESSORIES

The transceiver comes with the following accessories.

	Qty.
① DC power cable* .....	1
② Hand microphone (HM-36) .....	1
③ Spare fuses (FGB 30 A) .....	2
④ Spare fuse (FGB 5 A) .....	1
⑤ CW keyer plug (AP-330) .....	1

\*The illustration shows OPC-025D. However, OPC-639 is supplied with versions, which "CE" symbol on the serial

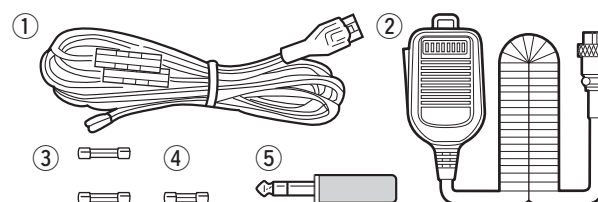

number.

# QUICK REFERENCE GUIDE

## ■ Installation

1. Install a ground system for DC noise suppression and RFI suppression
2. Install your DC power supply
3. Install lightning protection. This will help protect more than your gear.

### 1. Grounding your Shack


Although your radio will operate by connecting the DC power supply and antenna, it is necessary to have a good ground system in your shack. A ground connection is the electrical contact between the common point of an electrical or electronic system and the earth.

A good earth ground is necessary to prevent electrical shock, eliminate problems from RFI and DC noise. With more electronic devices being used today, it is also important to reduce RFI and EMI. Although you may not see interference in your shack, without a grounding system, your neighbors may experience interference. Even though many of these devices, where they must accept interference from their surrounding environment, it is best to eliminate as much of the possible interference from your shack.

If you do not have a grounding system for your shack, depending on the location of your shack, basement or ground floor, a good ground system can be as simple as a couple of ground rods driven 2 to 2.5 meter into the soil. When installing your IC-7400 to your grounding system, the shortest most direct connection is recommended.

**NOTE:** There are many publications covering proper grounding techniques. Check with your local dealer for more information and recommendations.

4. Install and connect an antenna system for the appropriate bands of operation
5. Connect other peripheral equipment. This includes microphones, headsets, TNC, amplifiers and any other equipment necessary to make your shack complete.

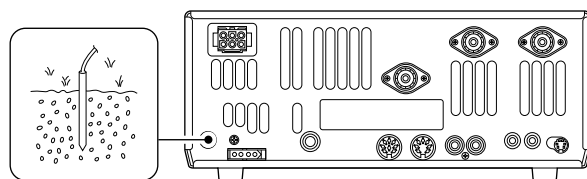

**WARNING!** NEVER ground station equipment or antennas to house gas lines. NEVER attach ground lines to plastic (pvc) pipe.

#### ◆ Some Symptoms if inadequate grounding

##### a. Poor DC Ground

50/60 Hz hum on the audio either Rx or Tx without the antenna connected.

If you feel a tingling sensation when you touch a metal surface. Surfaces such as the cover of your radio or power supply.

##### b. Poor RF Ground


While transmitting and you feel a tingling sensation when you touch a metal surface. Surfaces such as the cover of your radio or power supply.

While transmitting, you experience interference to other electronic devices, such as the telephone, television or stereo audio systems.

### 2. Installing your DC Power Supply


The DC power supply is a device used to convert 110/220 V AC, also know as Household current, to a steady source of 13.8 V DC.

The perfect match to your IC-7400 is the PS-125. This compact switching power supply is the matching power supply for your IC-7400 with a current rating of 25 A continuous duty. This plug and play unit plugs into the DC jack located on the rear of the radio.

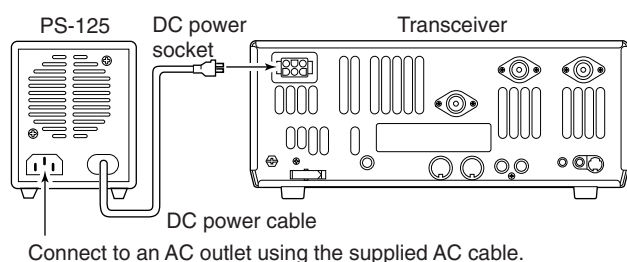

#### • If you are not using the PS-125:

Connect the supplied DC power cable to the appropriate color coded terminals, then insert the DC connector into the DC jack located on the rear of the radio. (The diagram below describes the connection with OPC-639. OPC-025D has no filter box and GND cable.)

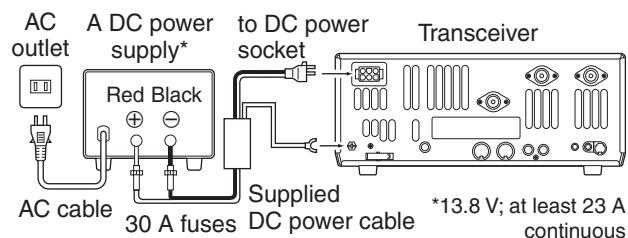

**NOTE:** Although the power supply current requirement is quite low during receiving, this not the case when you transmit. With many electrical devices in the shack, it is very important to verify the electrical circuit is not overloaded.

### 3. Installing lightning protection

Although you may not live in an area with high occurrence for lightning storms, it is always wise to take precautions for lightning or static discharges. Proper lightning protection not only offers protection to the ham gear, but the shack and most importantly the operator.


**NOTE:** There are many publications covering proper lightning protection, check with your local dealer for more information and recommendations.

### 4. Installing your antenna system


Whether your IC-7400 is your first radio or one of many, one of your key elements in a great shack is the antenna system. There are three connections on the back of your IC-7400, two for HF and 6 m and one for 2 m. If you are using one antenna for HF and 6 m, for simplicity, connect the antenna coax to ANT 1.

#### ANTENNA 1, 2

[Example]: ANT1 for 1.8–18 MHz bands  
ANT2 for 21–50 MHz bands

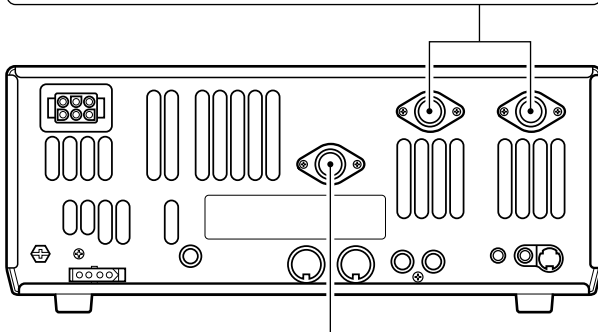

#### 144 MHz ANTENNA

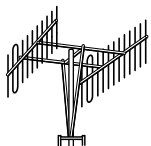





Connect a VHF (60–144 MHz) antenna; impedance: 50 Ω.

Your IC-7400 is equipped with an internal antenna tuner (ATU) for operation on 160–6 m. This ATU is designed to work with an unbalanced 50 Ω feedline. The purpose of the internal antenna tuner is to match the impedance of your antenna system to as close to a 50 Ω load as possible. This ATU will not operate with a long wire or ladder line (450 Ω or other balanced feedlines). An external ATU such as the AH-4 would be necessary for this kind of operation.

#### Antenna SWR

Each antenna is tuned for a specified frequency range and SWR may be increased out-of-range. When the SWR is higher than approx. 2.0:1, the transceiver's power drops to protect the final transistors. In this case, an antenna tuner is useful to match the transceiver and antenna. Low SWR allows full power for transmitting even when using the antenna tuner. The IC-7400 has an SWR meter to monitor the antenna SWR continuously.

#### PL-259 CONNECTOR INSTALLATION EXAMPLE

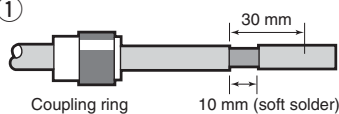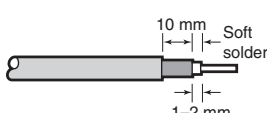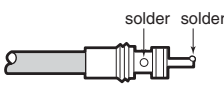- ①  Slide the coupling ring down. Strip the cable jacket and soft solder.
- ②  Strip the cable as shown at left. Soft solder the center conductor.
- ③  Slide the connector body on and solder it.
- ④  Screw the coupling ring onto the connector body.

30 mm ≈ 1 1/8 in    10 mm ≈ 3/8 in    1–2 mm ≈ 1/16 in

**WARNING:** Although a mag mount antenna works great on a vehicle, **DO NOT** use the IC-7400 with this type of antenna.

**CAUTION:** Although your IC-7400 has protection to drop down power with a high SWR, this does not completely protect the transceiver from transmission without an antenna. Make sure you have an antenna connected whenever you transmit with your radio.

**NOTE:** There are many publications covering proper antennas and their installation, check with your local dealer for more information and recommendations.

Count on us!

IC-7400  
#03 (Europe)

< Intended Country of Use >

<input checked="" type="checkbox"/> AT	<input type="checkbox"/> BE	<input type="checkbox"/> CY	<input type="checkbox"/> CZ	<input type="checkbox"/> DK	<input type="checkbox"/> EE
<input checked="" type="checkbox"/> FI	<input type="checkbox"/> FR	<input checked="" type="checkbox"/> DE	<input type="checkbox"/> GR	<input type="checkbox"/> HU	<input checked="" type="checkbox"/> IE
<input type="checkbox"/> IT	<input type="checkbox"/> LV	<input type="checkbox"/> LT	<input checked="" type="checkbox"/> LU	<input type="checkbox"/> MT	<input checked="" type="checkbox"/> NL
<input type="checkbox"/> PL	<input type="checkbox"/> PT	<input type="checkbox"/> SK	<input type="checkbox"/> SI	<input type="checkbox"/> ES	<input checked="" type="checkbox"/> SE
<input checked="" type="checkbox"/> GB	<input type="checkbox"/> IS	<input type="checkbox"/> LI	<input type="checkbox"/> NO	<input type="checkbox"/> CH	<input type="checkbox"/> BG
<input type="checkbox"/> RO	<input type="checkbox"/> TR	<input type="checkbox"/> HR			

IC-7400  
#04 (France)

< Intended Country of Use >

<input type="checkbox"/> AT	<input type="checkbox"/> BE	<input type="checkbox"/> CY	<input type="checkbox"/> CZ	<input type="checkbox"/> DK	<input type="checkbox"/> EE
<input type="checkbox"/> FI	<input checked="" type="checkbox"/> FR	<input type="checkbox"/> DE	<input type="checkbox"/> GR	<input type="checkbox"/> HU	<input type="checkbox"/> IE
<input type="checkbox"/> IT	<input type="checkbox"/> LV	<input type="checkbox"/> LT	<input type="checkbox"/> LU	<input type="checkbox"/> MT	<input type="checkbox"/> NL
<input type="checkbox"/> PL	<input type="checkbox"/> PT	<input type="checkbox"/> SK	<input type="checkbox"/> SI	<input type="checkbox"/> ES	<input type="checkbox"/> SE
<input type="checkbox"/> GB	<input type="checkbox"/> IS	<input type="checkbox"/> LI	<input type="checkbox"/> NO	<input type="checkbox"/> CH	<input type="checkbox"/> BG
<input type="checkbox"/> RO	<input type="checkbox"/> TR	<input type="checkbox"/> HR			

IC-7400  
#05 (Denmark)

< Intended Country of Use >

<input type="checkbox"/> AT	<input type="checkbox"/> BE	<input type="checkbox"/> CY	<input type="checkbox"/> CZ	<input checked="" type="checkbox"/> DK	<input type="checkbox"/> EE
<input type="checkbox"/> FI	<input type="checkbox"/> FR	<input type="checkbox"/> DE	<input type="checkbox"/> GR	<input type="checkbox"/> HU	<input type="checkbox"/> IE
<input type="checkbox"/> IT	<input type="checkbox"/> LV	<input type="checkbox"/> LT	<input type="checkbox"/> LU	<input type="checkbox"/> MT	<input type="checkbox"/> NL
<input type="checkbox"/> PL	<input type="checkbox"/> PT	<input type="checkbox"/> SK	<input type="checkbox"/> SI	<input type="checkbox"/> ES	<input type="checkbox"/> SE
<input type="checkbox"/> GB	<input type="checkbox"/> IS	<input type="checkbox"/> LI	<input type="checkbox"/> NO	<input type="checkbox"/> CH	<input type="checkbox"/> BG
<input type="checkbox"/> RO	<input type="checkbox"/> TR	<input type="checkbox"/> HR			

IC-7400  
#08 (Italy)

< Intended Country of Use >

<input type="checkbox"/> AT	<input type="checkbox"/> BE	<input type="checkbox"/> CY	<input type="checkbox"/> CZ	<input type="checkbox"/> DK	<input type="checkbox"/> EE
<input type="checkbox"/> FI	<input type="checkbox"/> FR	<input type="checkbox"/> DE	<input type="checkbox"/> GR	<input type="checkbox"/> HU	<input type="checkbox"/> IE
<input checked="" type="checkbox"/> IT	<input type="checkbox"/> LV	<input type="checkbox"/> LT	<input type="checkbox"/> LU	<input type="checkbox"/> MT	<input type="checkbox"/> NL
<input type="checkbox"/> PL	<input type="checkbox"/> PT	<input type="checkbox"/> SK	<input type="checkbox"/> SI	<input type="checkbox"/> ES	<input type="checkbox"/> SE
<input type="checkbox"/> GB	<input type="checkbox"/> IS	<input type="checkbox"/> LI	<input type="checkbox"/> NO	<input type="checkbox"/> CH	<input type="checkbox"/> BG
<input type="checkbox"/> RO	<input type="checkbox"/> TR	<input type="checkbox"/> HR			

IC-7400  
#09 (Spain)

< Intended Country of Use >

<input type="checkbox"/> AT	<input type="checkbox"/> BE	<input type="checkbox"/> CY	<input type="checkbox"/> CZ	<input type="checkbox"/> DK	<input type="checkbox"/> EE
<input type="checkbox"/> FI	<input type="checkbox"/> FR	<input type="checkbox"/> DE	<input type="checkbox"/> GR	<input type="checkbox"/> HU	<input type="checkbox"/> IE
<input type="checkbox"/> IT	<input type="checkbox"/> LV	<input type="checkbox"/> LT	<input type="checkbox"/> LU	<input type="checkbox"/> MT	<input type="checkbox"/> NL
<input type="checkbox"/> PL	<input checked="" type="checkbox"/> PT	<input type="checkbox"/> SK	<input type="checkbox"/> SI	<input checked="" type="checkbox"/> ES	<input type="checkbox"/> SE
<input type="checkbox"/> GB	<input type="checkbox"/> IS	<input type="checkbox"/> LI	<input type="checkbox"/> NO	<input type="checkbox"/> CH	<input type="checkbox"/> BG
<input type="checkbox"/> RO	<input type="checkbox"/> TR	<input type="checkbox"/> HR			